

Kirby Operator

with Adjustable Arms, Inflatable Lumbar Support
& Seat Slide

steelco®

WORKPLACE FURNITURE SOLUTIONS

Operating Instructions



1. Arm Rest Height Adjustment Button

Press and hold to adjust armrest height, release once height is set.



2. Back Rake Adjustment Lever

Pull up to adjust back rake (angle), push down again to lock in place.



3. Seat Height Adjustment Lever

Pull up and hold to adjust seat height, release once height is set.




4. Backrest Height Adjustment Knob

Turn anticlockwise to loosen, adjust backrest height, then turn clockwise to tighten and lock in place.



5. Seat Depth Adjustment Lever

Pull up and hold to adjust seat depth; seat will slide forwards/backwards. Release once depth is set.

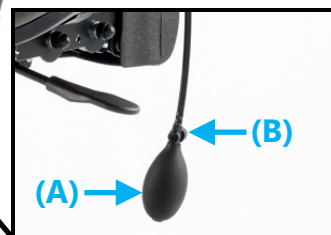

6. Inflatable Lumbar Support

Squeeze pump (A) to inflate lumbar support, press button (B) to deflate.