

# Kirby Operator

with Adjustable Arms  
& Seat Slide

steelco®

WORKPLACE FURNITURE SOLUTIONS

## Operating Instructions



### 1. Arm Rest Height Adjustment Button

Press and hold to adjust armrest height, release once height is set.



### 2. Back Rake Adjustment Lever

Pull up to adjust back rake (angle), push down again to lock in place.



### 3. Seat Height Adjustment Lever

Pull up and hold to adjust seat height, release once height is set.



### 4. Backrest Height Adjustment Knob

Turn anticlockwise to loosen, adjust backrest height, then turn clockwise to tighten and lock in place.



### 5. Seat Depth Adjustment Lever

Pull up and hold to adjust seat depth; seat will slide forwards/backwards. Release once depth is set.

